




## DROP-IN ANCHORS

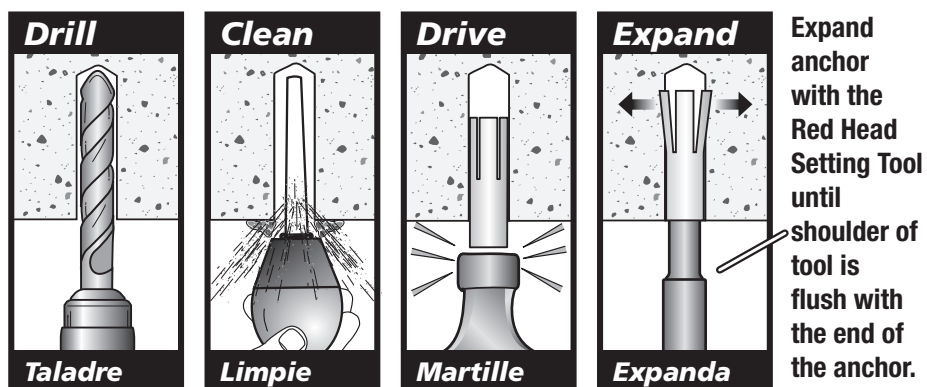

**The use of a carbide drill bit conforming to ANSI Standard B212.15 is recommended.**

Se recomienda el uso de una broca de carburo que conforme a la norma ANSI B212.15